


Aquastats



Direct Mount				
Model	Temp. Range °C	Switching Diff. °C	Set Point Adjustment	Features
L6188A2002	25 to 95	4-10	Dial	Inc. pocket
L6188A2010	40 to 110	4-10	Dial	Inc. pocket
L6188C2016	25 to 95	Man. reset	Screw	Inc. pocket

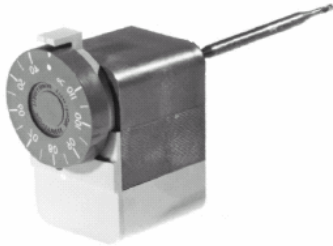

Remote Mount, 1.5m Capillary				
Model	Temp. Range °C	Switching Diff. °C	Set Point Adjustment	Features
L6188A2028	25 to 95	4-10	Dial	Mounting feet
L6188C2008	70 to 140	Man. reset	Screw	Mounting feet


Order pocket separately, model 45900409-003B 1/2" BSP, 105mm insertion depth including the thread.



Panel Mount, 1.5m Capillary				
Model	Temp. Range °C	Switching Diff. °C	Set Point Adjustment	Features
L6189A2043	40 to 110	4-10	Dial	
L6189C2007B	40 to 110	Man. reset	Screw	

Panel mount models mount inside a panel (or box). The dial or manual reset set point screw adjustment can be set from the outside of the panel.

Order pocket separately, model 45900409-003B 1/2" BSP, 105mm insertion depth including the thread.

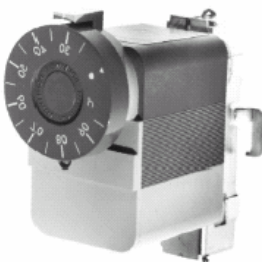

Strap On, Pipe Surface Mount				
Model	Temp. Range °C	Switching Diff. °C	Set Point Adjustment	Features
L6190B2006*	25 to 95	8	Screw	2 metre mounting strap
L6190C2004*	25 to 95	Man. reset	Screw	2 metre mounting strap

*Note strap on models listed above have a screwdriver set point adjustment. Not a dial as shown in the picture opposite.



Dual Aquastat				
Model	Temp. Range °C	Switching Diff. °C	Control	Features
L6191B2005	25 to 95 40 to 110	4	On/off Man. reset	Dual pocket
L6191B2013	40 to 110 40 to 110	4	On/off Man. reset	Dual pocket
L6191A2007	40 to 110 40 to 110	4 to 10 4	On/off On/off	Dual pocket

Dual Aquastat pocket (included above) model 45900409-007B